

HOW TO: relearn transmitter/receiver

updated: March 22, 2022


***power must be on (red light visible on receiver) for learn process



step 1:
remove transmitter
cover



step 2:
press 'learn' on
transmitter

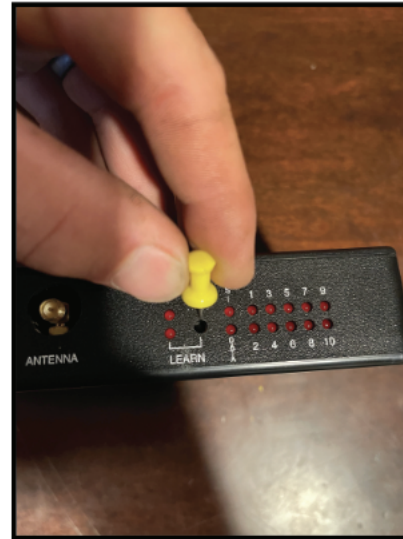

step 3:
press 'learn' on
receiver



step 4:
press 'learn' on
transmitter